



**FAN WILL NOT OPERATE or INTERMITTENTLY CUTS OUT:**

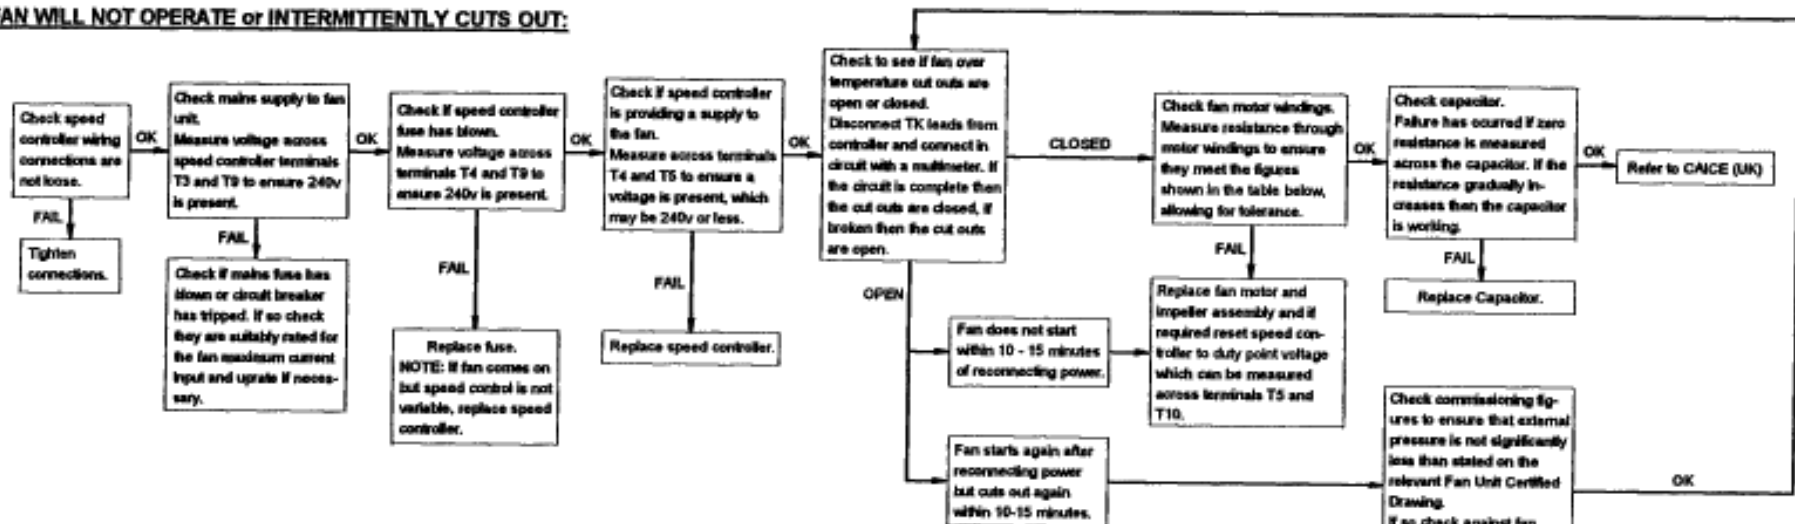

**FAN WILL NOT PROVIDE SUFFICIENT AIR VOLUME or SPEED CONTROL NOT VARIABLE:**

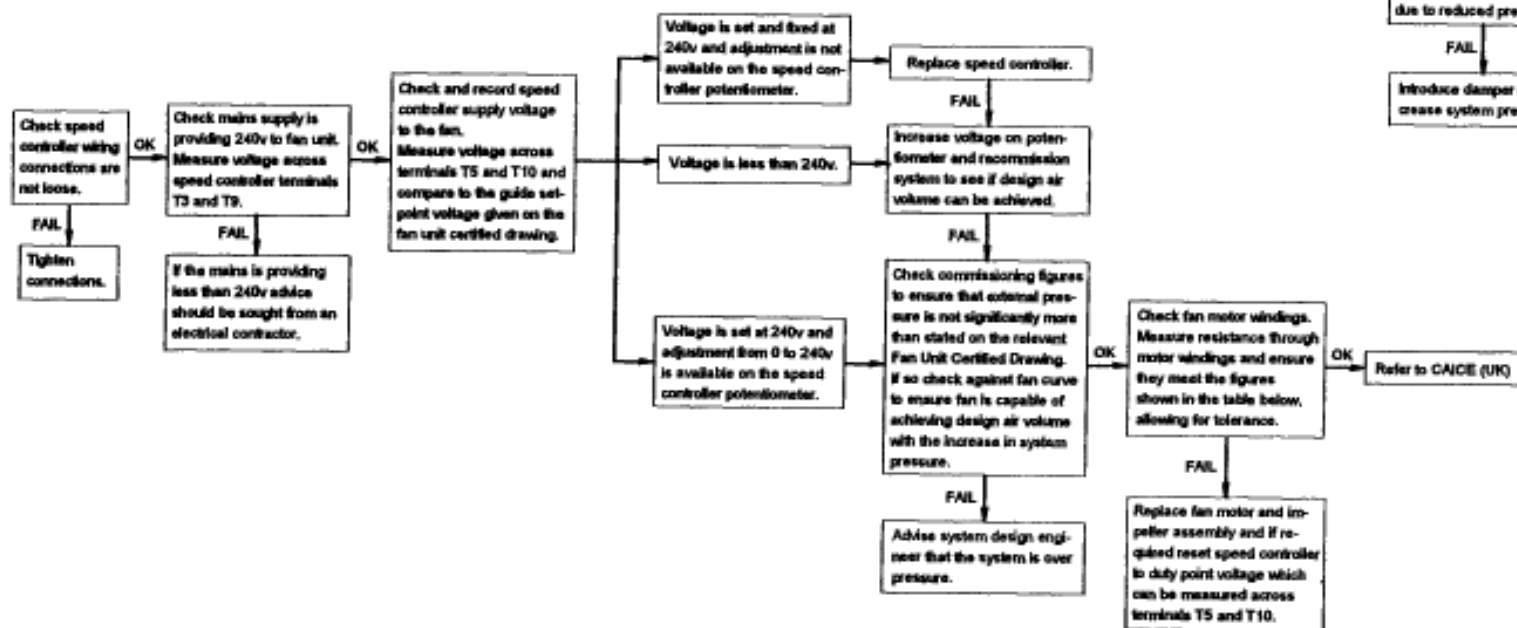

Fan Size	Resistance (Ohms)	
	Z winding (Main - Run)	U winding (Aux - Start)
A	223	148
B	213	115
C	55	54
D	57	22
E	36	15
F	16	6
G	9	4
H	31	10
I	16	7
J	9	4

**TRUBLE SHOOTING GUIDE FOR SINGLE FAN UNITS**